




ELECTRIC KARTS OPERATING & USER MANUAL

Safe setup, remote control and participant operation

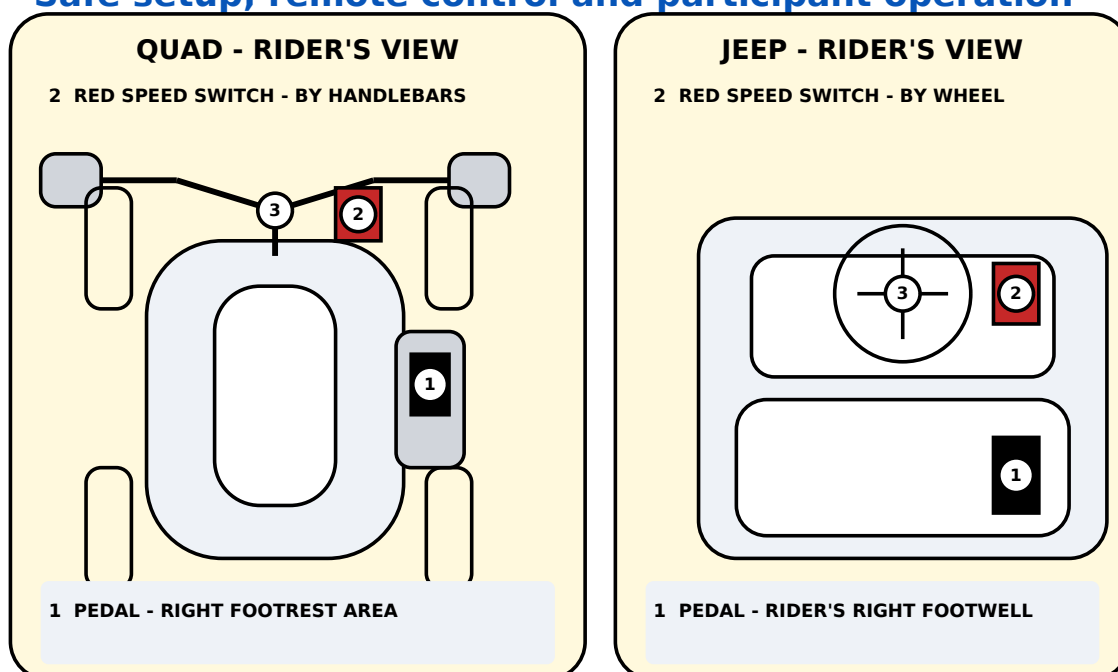

3 = STEERING CONTROL • FOOT PEDALS ARE SHOWN ON THE RIGHT


A responsible adult must hold the correct remote and actively supervise every moving electric kart.

STANDARD ELECTRIC KARTS	SMALL-CHILD / TODDLER KART
Remote activation, right-hand foot pedal, steering wheel and red HIGH/LOW speed switch.	Different controls: steering wheel or handle attachment, with motors switched ON/OFF using its red switch.

Use only on the approved Wheelie Kids course or another flat, dry, enclosed area. Never use on roads, near traffic, steps, kerbs, slopes or water. Follow the rated capacity displayed for each kart; the main children's electric karts are intended for riders up to 40 kg.

1. REMOTE CONTROL - REQUIRED FOR EVERY ELECTRIC KART

The assigned adult must have the correct remote in hand, know which kart it controls and keep the STOP button immediately available throughout operation.

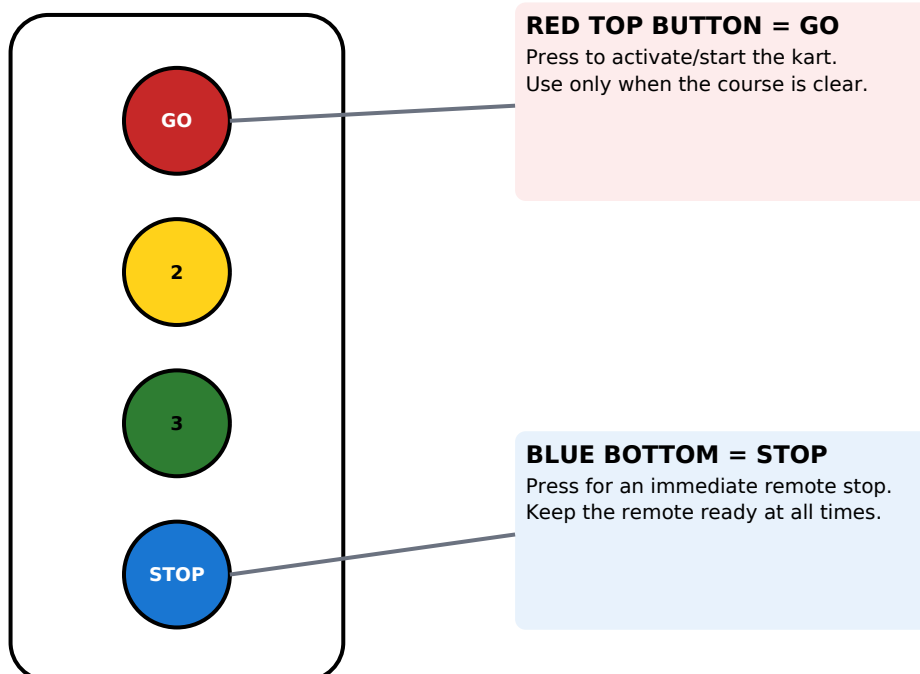

Remote appearance may vary; identify buttons by position and colour.


TOP RED BUTTON = GO / ACTIVATE • BOTTOM BLUE BUTTON = STOP

BEFORE PRESSING GO	DURING USE	WHEN PRESSING STOP
Confirm the kart/remote pairing, rider readiness and a clear course.	Keep the kart in sight and maintain a clear path to press STOP immediately.	The kart must stop. If it does not, keep people clear and remove the kart from use.

Do not rely on the rider alone to stop the kart. The supervising adult remains responsible for remote intervention.

2. STANDARD ELECTRIC KART CONTROLS

These instructions apply to the regular electric quads, jeeps and similar children's karts. They do not apply to the small-child/toddler kart described on the next page. In both diagrams, 'rider's right' means the child's own right side while seated.

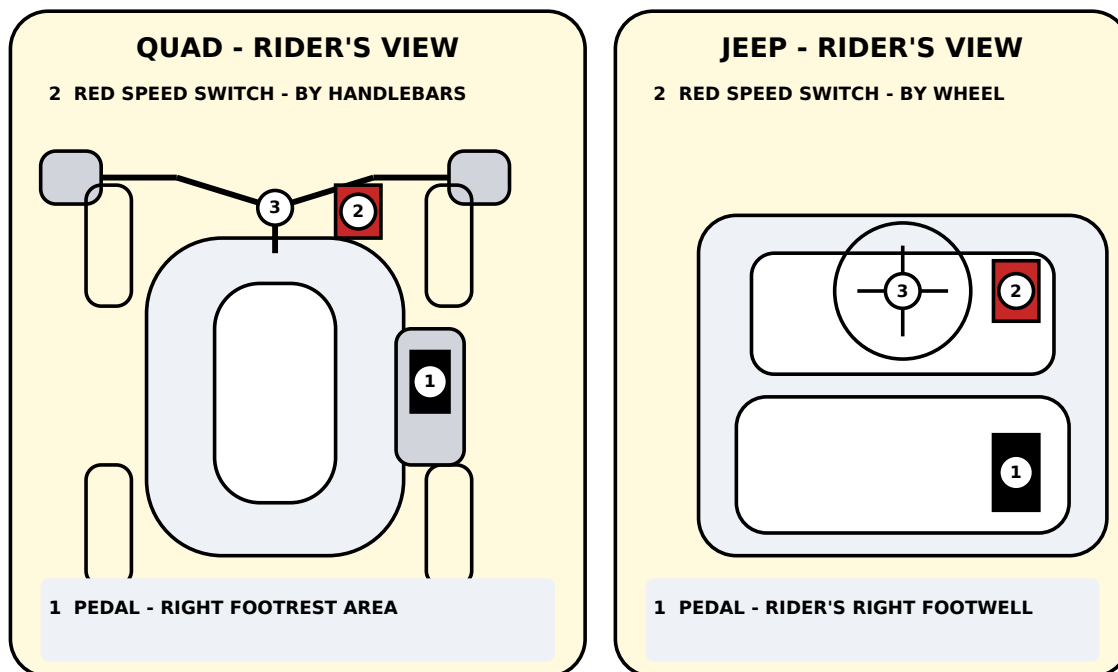


STEP	ACTION
1 - Select LOW	Move the red speed switch toward the rider. Begin every new rider and every session in LOW.
2 - Adult activates	The supervising adult presses the remote's top red GO button.
3 - Rider drives	The rider presses the right-hand foot pedal. Releasing the pedal should stop drive power.
4 - Rider steers	Turn the steering wheel smoothly; avoid sudden full-lock turns.
5 - Adult stops	Press the remote's bottom blue STOP button whenever intervention is needed.
6 - HIGH only if approved	Move the red speed switch toward the front only when the supervisor determines it is safe.

Always start in LOW. HIGH speed is a supervisor decision, not a rider choice.

3. SMALL-CHILD / TODDLER KART - DIFFERENT CONTROLS

This smaller yellow kart is intended for very young children. Its motor control differs from the standard electric karts, so brief the supervising adult separately.

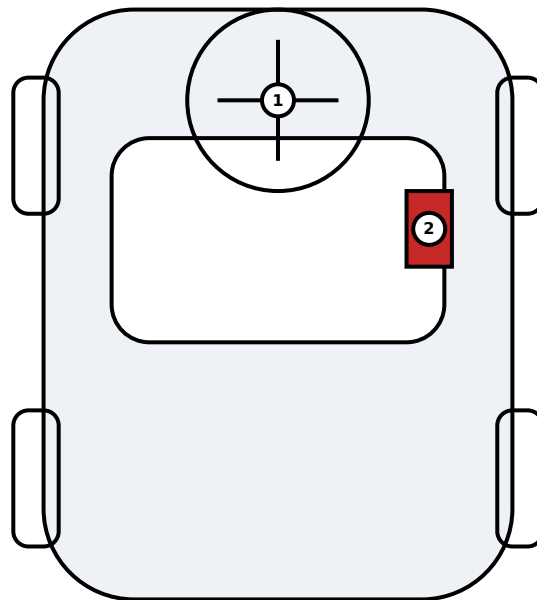

STEERING WHEEL OR HANDLE

Turn gently to steer.

RED MOTOR ON/OFF SWITCH


Motor control only - not a speed switch.

CONTROL	USE
Remote	Still required. The adult must keep the matching remote ready for supervision and stopping.
Red motor ON/OFF switch	Turns the motors ON and OFF. This is motor control only - it is not a speed-control switch.
Steering wheel / handle attachment	Used to steer. Fit the intended attachment securely before use.
Speed control	There is NO speed-control switch on the toddler kart.
Supervision	Use at a slow pace with close, active adult supervision suitable for the child's age and ability.

TODDLER KART: one red motor ON/OFF switch only. There is no HIGH/LOW speed-control switch.

4. BATTERY CONNECTION & REMOTE RECEIVER

Access locations vary: under the seat on quad-style karts, and under the bonnet on jeep-style karts such as the red kart. Only a trained adult should access these compartments.

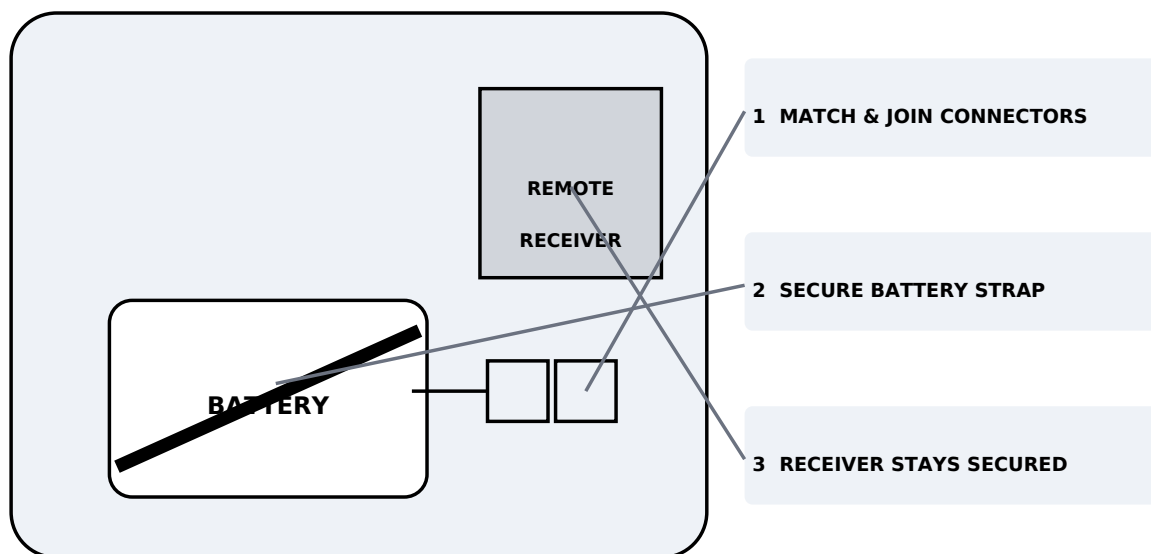

SAFE CONNECTION SEQUENCE	INSTRUCTION
1 - Kart stopped	Remote STOP selected; kart stationary; rider removed.
2 - Inspect	Check connector housings, leads and battery strap for damage, heat, corrosion or exposed wiring.
3 - Match connectors	Align the matching connector halves. Do not force, twist or join mismatched connectors.
4 - Secure connection	Push together firmly using the connector housings, never by pulling the wires.
5 - Strap battery	Secure the battery with the battery strap so it cannot move during operation.
6 - Check receiver	Confirm the large metal remote receiver box remains firmly secured inside the compartment.
7 - Close compartment	Refit and secure the seat or bonnet before activation. Never operate with the compartment open.

STOP USE immediately for damaged wiring, loose components, unusual heat, smell, smoke, sparks or battery leakage.

5. PRE-USE INSPECTION & START-UP

If any check fails: tag the kart OUT OF SERVICE and keep it disconnected until cleared by an authorised person.

CHECK	PASS STANDARD	✓
Body, seat and steering	Secure; no cracks, sharp edges, loose trim or obstructed steering.	
Wheels and tyres	Secure, rotate correctly and show no serious damage or loose parts.	
Foot pedal - standard karts	Returns freely and is unobstructed.	
Red motor switch - toddler kart	Operates correctly and is clearly identifiable.	
Speed switch - standard karts	Moves positively between LOW and HIGH; start in LOW.	
Battery and connector	Matched, fully connected, dry and secured by the strap.	
Receiver and wiring	Metal receiver box secure; wiring protected and undamaged.	
Remote	Correct pairing confirmed; red GO and blue STOP tested before rider entry.	
Course	Flat, dry, enclosed, clear of traffic, slopes, steps, cables, debris and bystanders.	
Rider	Within kart limit, seated correctly, footwear secure and instructions understood.	

Start-up order

- Place the kart in the approved starting area and select LOW where fitted.
- Confirm the correct remote and test STOP before seating the rider.
- Seat and brief the rider; keep hands, feet, hair and clothing inside and clear of wheels.
- Close the course, check spacing, then press remote GO.
- Allow the rider to use the pedal and steering only after the supervisor's signal.

6. SAFE RIDING & SUPERVISOR RULES

RIDER RULE	SUPERVISOR CONTROL
One rider only; remain seated and face forward.	Keep the matching remote in hand and the kart in sight.
Press the pedal smoothly and release it to slow/stop drive.	Start in LOW and control entry, spacing and speed.
Steer smoothly and look in the direction of travel.	Stop unsafe turns, crowding or loss of control immediately.
Keep hands, feet, hair and clothing inside the kart.	Keep pedestrians and waiting riders outside the course.
No bumping, racing contact, pushing, towing or stunts.	Press blue STOP before approaching a stationary or disabled kart.
Stop when told and wait for instructions.	Use a clear STOP signal and enforce it consistently.

Do not use

- On roads, car parks open to traffic, public paths or near moving vehicles.
- On wet surfaces, loose gravel, steep slopes, kerbs, stairs, ramps or near water.
- With damaged controls, tyres, steering, wiring, connectors, battery strap or remote system.
- Beyond the stated rider limit or with more than one rider unless specifically designed and approved.
- While charging, with the battery compartment open, or when unusual heat, smell or noise is present.

EMERGENCY: Press BLUE STOP, keep people clear, remove the rider only when safe, disconnect the battery if safe to do so, and tag the kart out of service.

7. SHUTDOWN, STORAGE & QUICK CHECKLIST

Shutdown

- Bring the kart to a complete stop and press the blue remote STOP button.
- Remove the rider before opening any battery compartment.
- Switch the toddler kart's red motor switch OFF; place standard controls in the safe/off state.
- Disconnect the battery by gripping connector housings, not the wires, when required by the hire procedure.
- Inspect for damage, clean with a lightly damp cloth and dry fully. Do not hose electrical parts.
- Store the kart, battery and labelled matching remote securely in a dry indoor location.

QUICK SESSION CHECKLIST

Date:		Site / event:	
Supervisor:		Kart ID / remote ID:	

☐ Correct kart and remote pairing confirmed	☐ Red GO and blue STOP tested
☐ Battery connected and strapped	☐ Receiver box and wiring secure
☐ Seat, body, wheels and steering checked	☐ Pedal or toddler red switch checked
☐ LOW selected on standard kart	☐ Course flat, dry and enclosed
☐ Rider fit and safety briefing complete	☐ Post-use inspection and shutdown complete

Faults / action taken:	
Supervisor signature:	

Wheelie Kids | www.wheeliekids.com.au

This activity guide supports Wheelie Kids operations. It does not replace original manufacturer instructions, electrical servicing requirements or site emergency procedures.